

TBL-12W2PRO USER GUIDE

INTRODUCTION

Thank you for choosing the LeaderTab TBL-12W2PRO. This user manual is a quick guide for you to familiarise yourself with the unit's basic features.

CONTENTS	
1. Precautions Before Use	2-3
2. Key Layout and Definitions	4
3. Introduction to Windows	5
1. Windows 10 Start Screen	5
2. Apps Introduction	6-7
3. Start Menu, Settings	8-9
4. Cortana, Action Center	10
5. Task View	11
4. Basic Operations	12
1. Sleep, Shut Down, Restart	12
5. Technical Specifications	13

1. Precautions Before Use

- 1. This unit is suitable for use in non-tropic areas below 2,000 metres, and the amark in the nameplate indicates the product is suitable for use in non-tropical areas.
- 2. Prevent the unit from falling to the ground or from being strongly impacted.
- 3. Do not use for long amounts of time in any environment where the air is too hot, too cold, too humid or with too much dust.
- 4. Avoid using the unit in strong magnetic or static environments as much as possible.
- 5. If any water or other liquid splashes onto the unit, switch off immediately and do not use until it dries out.
- 6. Do not clean the unit with any detergents containing chemical elements or other liquids to avoid causing damage from corrosion and damp. If cleaning is necessary, use a dry soft cloth.
- 7. Leader Computers shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and/or hardware operation, maintenance, or any other accident. Users are encouraged to back up their important data regularly.

- 8. Please back up your important data and material regularly to avoid data loss.
- 9. Please do not disassemble the unit by yourself; you may lose the right to warranty.
- 10. This Quick Use guide and driver software may be updated at any time. For updated software please visit http://www.leader-on-line.com.au to download. If anything is found to be inconsistent with the Quick Use Guide, the material object shall prevail.
- 11. Replacement with incorrect batteries may cause explosion. Make sure to use original or approved batteries. For further information you can contact Leader Warranty on 1300 789 701.

2. Key Layout and Definitions





3. Introduction to Windows

1. Windows 10 Start Screen

Windows 10 Start: On the Start Screen, you can see many programs on the right, called Tiles. They are pinned there on the start menu for easy access. For some programs, you will need to log onto Windows with your Microsoft account before the application completely runs.



2. Apps Introduction

Besides the pinned applications (tiles) you can also start any application installed on the unit from the menu on the left, by scrolling down through the list to find your selected application.





If you want to pin more applications to the Start Screen or taskbar, you can right click the application and click Pin To Start or under the More menu, Pin To Taskbar.



If you want to cancel or delete a certain application in the start screen or taskbar, right click the application, click Unpin From Start or Unpin this program from taskbar.







3. Start Menu

The Start Menu also has icons on the left hand side for access to documents and settings.




Setup (Windows Settings)

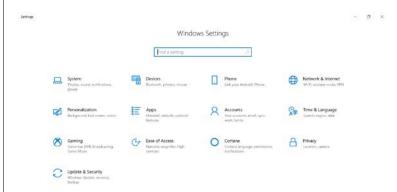


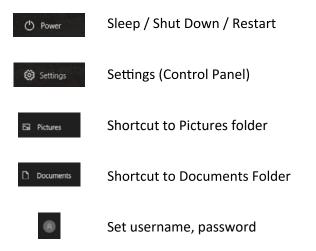

Search Menu (Cortana)

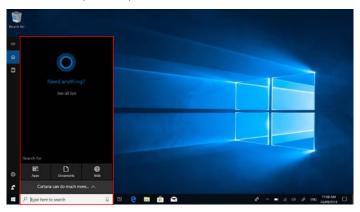


4. Action Center

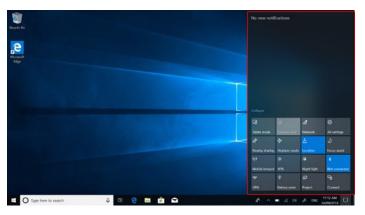

Action Center is a notification and quick access control center. It allows for changes to regularly used settings like Wi-Fi, Bluetooth, Screen Brightness and more.

5. Task View


Click Task View to show all applications that are currently running in a tiled format in full screen. It is useful if you are quickly looking for a specific application to switch to.

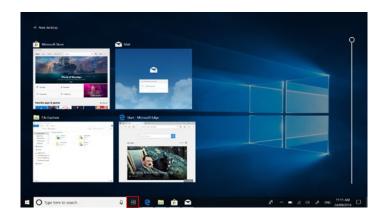

4. Basic Operations

1. Sleep, Shut Down and Restart



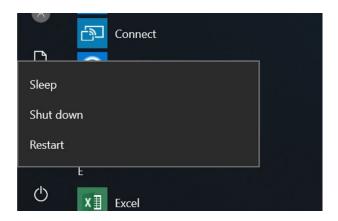

5. Technical Specifications

Brand	Leader
Model	TBL-12W2PRO
Operating System	Windows 10
CPU	Intel Celeron N3350 (up to 2.3GHz)
Screen	11.6" Full HD IPS Touch Screen
Display Scale	16:9
Resolution	1920 x 1080
Memory	4GB DDR3
Connectivity	802.11ac/b/g/n, Bluetooth 4.0
Storage	64GB
Other	3.5mm Headphone Jack, USB 3.0, USB Type-C
Front Camera	Front and Rear 2MP
Card Reader	Micro SD
Dimensions/Weight	291.3 x 181.6 x 10mm (LxWxH)
Warranty	1 Year Australia Wide Pickup & Return Warranty

OPERATING TEMPERATURE: -10C ~ 40C

CAUTION: There is a risk of explosion if the battery is replaced by an incorrect type.

Dispose of used batteries according to the battery instructions.



Manufacturer: ILIFE TECHNOLOGY(HK) CO., LTD

Address: Unit F & G, 28/F, Montery Plaza, 15 Chong Yip Street, Kwun Tong, Kowloon, Hong Kong

Hereby, ILIFE TECHNOLOGY(HK) CO., LTD declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU

Importers: LEADER Computers

Address: 165-187 Franklin Street, Adelaide, SA 5000, Australia

A copy of the declaration of conformity can be obtained with this user manual; this product is not restricted in the EU.

The wireless operation frequency:

Bluetooth: 2402-2480MHz. Max EIRP Power 3.62dBm

WIFI: 2412MHz-2472MHz, Max EIRP Power 16.16dBm

WIFI: 5180-5240MHz, Max EIRP Power 19.43dBm

Safety Warnings and Attention

Battery Caution:

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF LISED RATTERIES ACCORDING TO THE INSTRUCTIONS

Adapter Caution:

Adapter shall be installed near the equipment and shall be easily accessible.

Do not store or use your product in temperatures higher than 50°C.

If use adapter for charge, adapter must be comply 2014/30/EU Directive

RF Exposure Statement

SAR tests are conducted using standard operating positions according to the CE standard with the transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the Multi-functional Handheld while operating can be well below the the maximum value.

For body worn operation, this model product has been tested and meets the CE RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and positions product contact the body (0 mm separated for body). Highest Body SAR value is 0.157W/kg (BodySAR-10g) Non-compliance with the above restrictions may result in violation of RF exposure guidelines.